



betap[®]
makes your brand



Installation guide
landscaping grass

Content

Before Starting	3
Preparation	4
Installation	5
Maintenance	5
Question	6

Before Starting

1. In order to avoid possible colour differences, all Betap products are marked with a roll number. It is the accountability of the flooring company or the person who accepts the product, to check the number of items delivered and rolls on any defects before the bill of loading is signed off.

NOTE: For each installation a maximum of 50 m² can be installed for assessment. If an interested party detects any discrepancy between the original specification or a production fault, Betap must be informed of this before further installation.

2. The products may be temporarily crushed as a result of packaging, storage and transport. This effect occurs in the case of all types and qualities of landscaping grass and disappears automatically when the pile recovers. The carpet is given its original appearance back again.
3. Not following this installation guide may invalidate the warranty. Betap is not responsible for errors arising from the application of a different installation method of these installation instructions. These instructions should be read in conjunction with the Betap sales terms.
4. Betap owns all the rights to change the instructions when needed.

Preparation

Betap carpet and carpet tiles can be installed on every floor provided that is sturdy, dry, clean and level. This according to national and European guidelines. Residues of previous floor covering must be removed. Before starting the installation of the flooring, it is needed to clean the entire floor. This can be done with a vacuum cleaner that can be used for heavy duty applications.

1. Measuring

Landscaping grass of Betap can be bought on 2 and 4 meters wide. Before trimming the landscaping grass to rough sizes measure the entire surface. When cutting the landscaping grass to rough dimensions add 10 to 15 cm extra of width and length. Landscaping grass provided by Betap needs to acclimatize in the original packaging at least 24 hours before installation at a minimum temperature of 10°C.

2. Prepare surface

Betap landscaping grass can be installed on every surface provided that is relative dry, clean and level. The best subsoil is a layer of ca. 10 cm buildings sand. Old landscaping grass or paving must be removed before installation. The subsoil should be sufficiently flat, stable and water permeable. Adding drainage can be recommended. After compacting the sand-bed it should be levelled. On top of the sand a geotextile nonwoven can be added from extra stability.

3. Prepare edging

For a nice clean look, adding edging or curbing is recommended. All kinds of materials can be used for that: stone, concrete, (hard)wood or bendable plastic and bendable metal. By using edging or curbing your lawn is securely enclosed. Having a border like that can also cover uneven edges. It may be wise to use tent pegs to secure your lawn at the edges.

Installation

1. Tools

Use a measuring tape, carpet knife, carpet roller, seam tape and a hammer.

2. Installing landscaping grass

Start with laying out the different pieces of landscaping grass. When the rough placement is ready place the longitudinal seams close together and cut with a carpet knife along the side to get a nice seam across the entire surface.

Use the seam tape underneath the seam to secure the two pieces together. Betap recommends the landscaping and eventing tape which is available in different widths.

3. Quality check

 
Check frequently the straightness of the pieces. Also checking if the pieces are joining correctly.

4. Post installation

When installation is completely finished, it is allowed to walk over the floor. In case of moving heavy advise to put hardboard on top of the landscaping grass.

Maintenance

All landscaping grass qualities of Betap are low-maintenance. To keep your lawn surface beautiful, we advise you to remove organic debris like leaves etc. with a leaf blower or broom regularly.

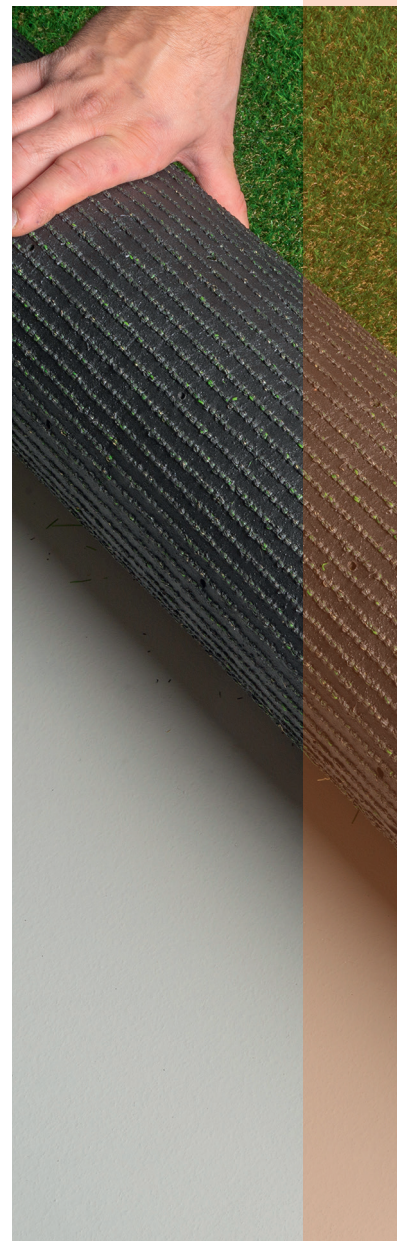

Question

For more information, contact the customer service department on +31 38 3861060 or visit our website: www.betap.com

